


GENERAL INSTALLATION REQUIREMENTS

Traffic pads should be installed after the roof has been completely surfaced with gravel, slag, etc. All loose surfacing materials should be swept from the area and the traffic pad adhered in coal tar pitch in accordance with the traffic pad manufacturer's instructions. Some manufacturers require that their product be spaced like stepping stones with a minimum of 6 inches between pads. Consult the traffic pad manufacturer's literature for information on product suitability and installation.

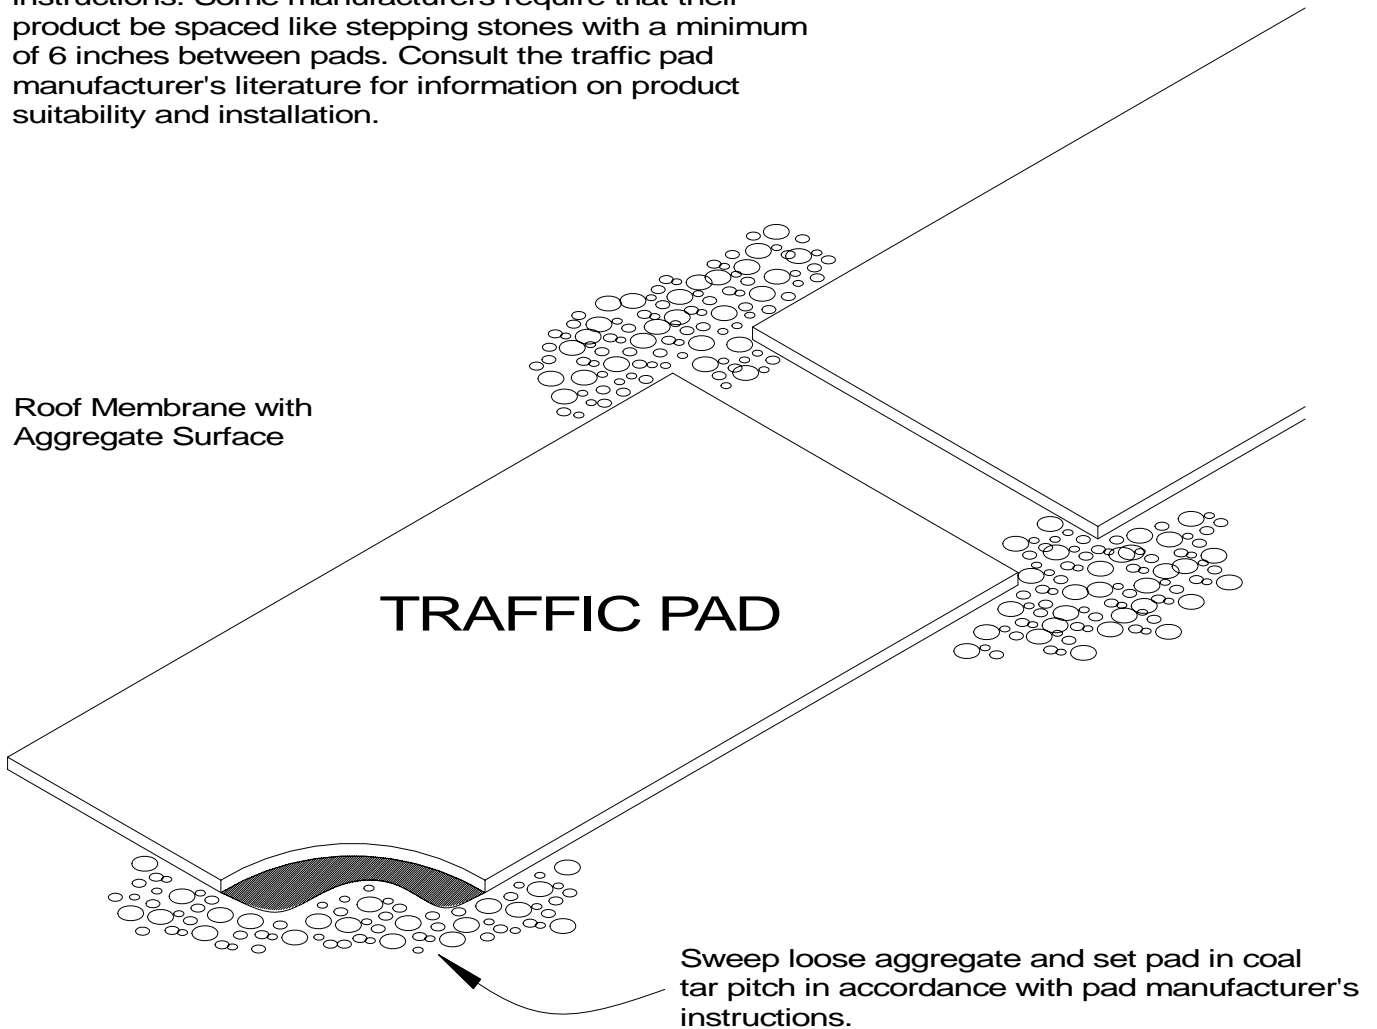

DURAPAXTM
COAL TAR
COMMERCIAL ROOFING SYSTEMS

TRAFFIC PAD

DATE:
1-1-06

SCALE:
NONE

DRAWING NO.:
B20ISO